




No arms

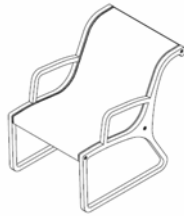

End arms

Included components: (4) M10 x 100mm threaded sleeves for anchoring

Tools required:

- Crane or forklift to move 235 lbs.
- Wood supports or straps
- Ø14mm masonry drill
- Chemical anchoring adhesive (Hilti HIT RE 500 or equivalent)
- Compressed air and wire brush

INSTALLATION:

1. Determine placement of chair.
2. Thread anchors into chair legs.
3. Set chair in position and mark hole locations.
4. Measure distance from bottom of chair leg to bottom of installed threaded rod.
5. Drill Ø14mm holes in concrete slab. Drill to depth measured in step 4, plus ½".
6. Clear holes of debris using wire brush and compressed air.
7. Fill holes with epoxy according to manufacturer's recommendations.
8. Slowly set chair in position.
9. Wipe away excess epoxy before it cures.

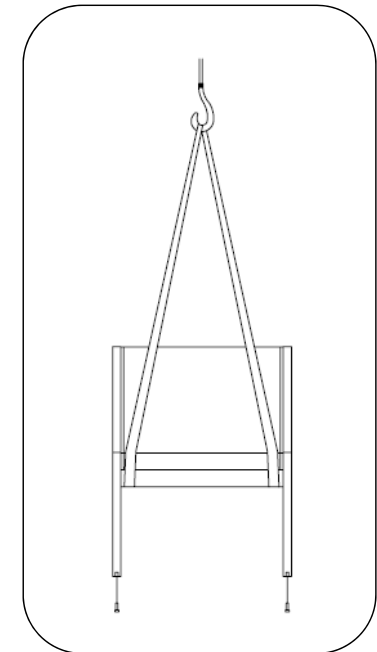


Fig. 1 – Crane install – strap locations