
Date: February 20, 2018 www.landscapeforms.com

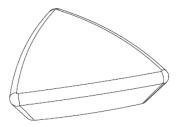

Included components: No assembly required

Tools required:

- Crane or forklift.
- Straps

Extasi	
Weight (lbs)	3131
Area of Base (in²)	1306
Pressure (lb/in²)	2.40

INSTALLATION:

- 1. Determine placement of bench.
- Set in place with proper equipment such as a forklift or crane. See Fig. 1.

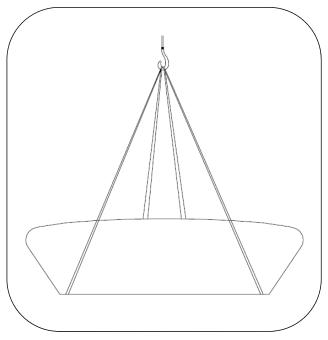


Fig. 1 – Crane install – strap locations

Ph: 800.521.2546