




**Escofet**<sub>®</sub> Flor

Installation Guide



Included components: No assembly required

## Tools required:

- Proper heavy equipment to move 2235 lbs. (small) or 3847 lbs. (large)
- Non-marring straps

## **INSTALLATION:**

- 1. Determine placement of bench. Benches may be placed end to end to achieve larger layouts.
- 2. Set in place with proper equipment such as a crane. See Fig. 1.

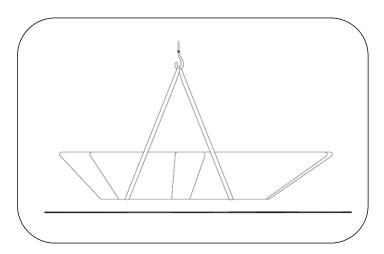


Fig. 1 – Crane install – strap locations